


1. COMPACTED FOUNDATION

Foundation shall be compacted, leveled and clean, no loose rock.

2. LIFTERS & HANDLING

Lifters location shall be at 2'-0" from each end for duct bank 10' - 15' long and sling angle should be 60 degrees minimum.

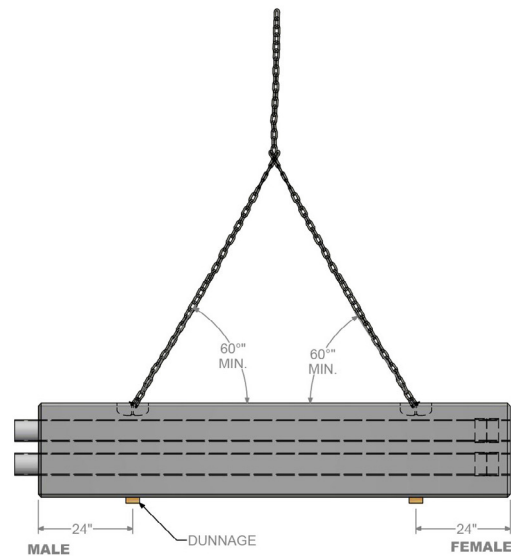

3. ALIGNMENT & PULLING

Place lifting chains (adequate capacity) as shown, align PVC ducts as shown then pull the lifting chain to the left for full conduit insertion.

4. BACKFILLING

Backfill can be provided as soon as duct banks are installed and joined.

PLEASE CONTACT LOCKE SOLUTIONS WITH ANY QUESTIONS.